



1. Identify the equipment to be protected by the ZonePreserver™ unit.
2. Plug the ZonePreserver™ power cord into the grounded AC outlet.
3. Plug the equipment to be protected into the receptacle on the

WARNING: The outlet must be grounded.

INSTALLATION

ZonePreserver™ Transient Voltage Surge Suppressors are used for the protection of AC power equipment.

INTRODUCTION

Adhering to these instructions guarantees maximum performance of this Protection device.

CONGRATULATIONS! YOU HAVE JUST PURCHASED THE BEST SURGE PROTECTION IN THE INDUSTRY!



A part of **COOPER** Crouse-Hinds

ZONEPRESERVER™ SERIES

AC Power Receptacle Protection

Installation Instructions & User Manual

4300 Fortune Place, Suite A West Melbourne, FL 32904
(800) 544-4737 (321) 725-8000 FAX (321) 727-0736

If it fails, we replace it!

In the event that this unit fails to perform as specified during the Ten-Year Warranty period, just call our customer hot line (800) 544-4737, to obtain a Return Authorization Number and Atlantic Scientific Corporation will immediately ship a replacement for the defective unit free of charge (installation labor excluded).

10 Year Warranty

The green light(s) off indicates a loss of protection. Check that the total load does not exceed the product current rating. If a green light goes out and AC power is present at the receptacle, the unit has reached a fail safe condition and must be replaced.

When AC power is applied, a green light(s) will illuminate, indicating normal operation.

All ZonePreserver™ units are equipped with comprehensive indicators showing the functionality of the suppressor.

INDICATION